

## Qsig Basic Assignment

Wheel settings and trunk numbers are for example only!

1. CM 050>04>09 Where 04 = the sense wheel setting of the 24DTI card.
2. CM 050>05>32 Where 05 = the sense wheel setting of the SC01 card.
3. CM 0608>0>05 Where 05 = the sense wheel setting of the SC01 card.
4. CM 0701>0400~0423>D100~D123
5. Assign CM 30 as follows

Trk \ CM	3000	3002	3003	3007	3040	3041
101	10	21	21	000	21	21
122	10	21	21	022	21	21
123	11	31	31	NONE	31	31

6. Assign CM 35 as follows

Rt. \ CM	3500	3504	3509	3518	3590	3593	35113
10	04	2	08	0	5	00-07	1
11	15	7	15	1	5	15	1/0

**Note: The only assignment in route data for the D channel route other than the default setting is CM 3590(5=Qsig) and CM 35113 (1=User/0=Network). A PBX on one side of the QSIG span MUST be set for "User" and the PBX on the other side set to "Network". If both sides are set the same the span will not work.**

7. CM A900>0>123
8. CM AA00>04>0