Non-Display IP Phones (ITL-2E)




If you wish to pre-configure the non-display 2 button IP Phone you must first assign it an IP Address so that the phone can be configured through a browser. To do this you will need a simple DHCP application running on your PC to provide this address. This example shows Tftpd32 which is freeware available at http://tftpd32.jounin.net. You will also need an isolated switch to connect you PC and IP Phones to (switch will need to support POE or a power pack or an in-line power adapter will be needed for the IP Phone).



First remove your pc from any network connection and assign a static IP address.


In Windows XP go to **Start**, **Settings**, **Control Panel**, **Network Connections**, and double click the **Local Area Connection** (with no network connection there will be a red X on this NIC) then select the **Properties** button.

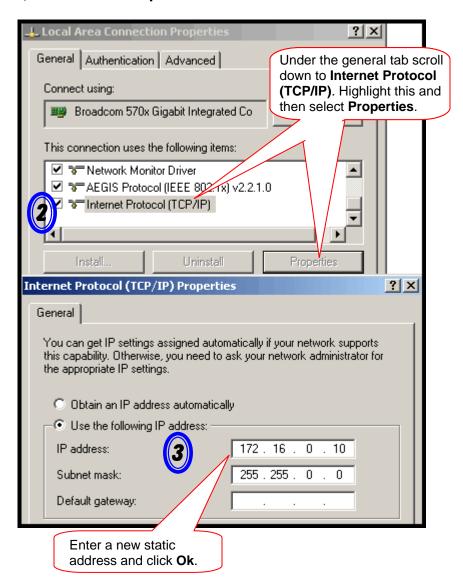


Page 1 of 3 APT 1.0



Start the Tftpd32 application.

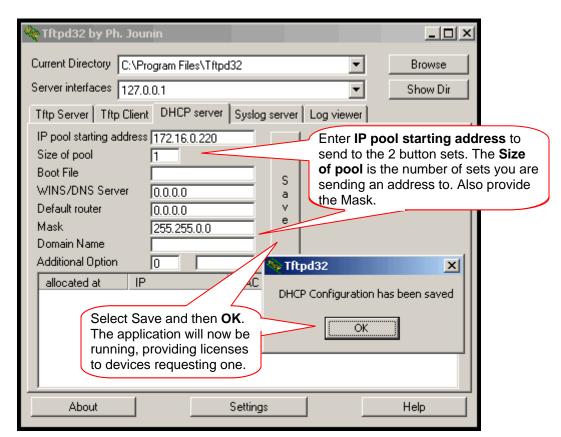



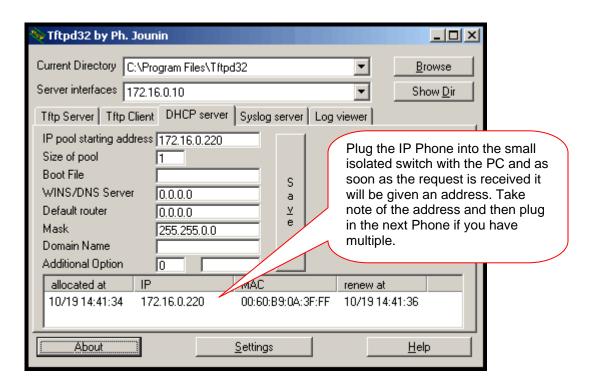


Note: Windows Firewall or other 3rd party firewall software running on the PC may have to be disabled.


Page 2 of 3 APT 1.0



Open a browser window and type in the IP address given to the IP Phone in step 5.

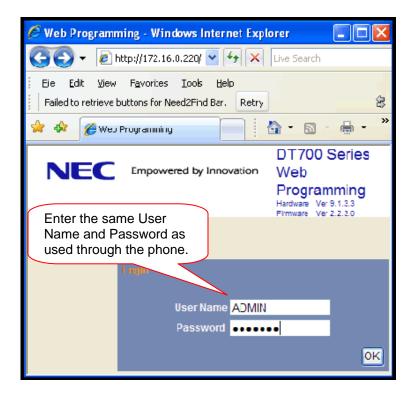



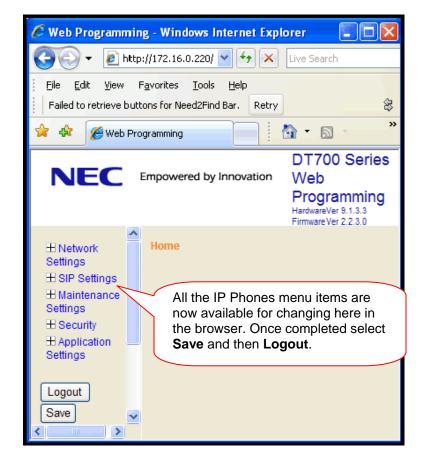

Page 3 of 3 APT 1.0